



HISTORIC PLAQUE PLAQUE INSTALLATION INSTRUCTIONS

City of Covington- Historic Preservation and Planning
Department of Development
20 W Pike Street, Covington, KY 41011
Tel: (859) 292-2171 Fax: (859) 292- 2106
email: eahouse@covingtonky.gov
www.covingtonky.gov

PLAQUE PLACEMENT

As a general rule, plaques are to be placed on the facade of the building facing the main street. If the entrance is on the front of the house, plaques should be placed to the left or right of the door. Figure A. If the main entrance is on the side of the house, place the plaque near the corner of the house. Figure B.

Plaques may also be placed on brick porch piers. The suggested mounting height is 5'6" above porch or entry floor.

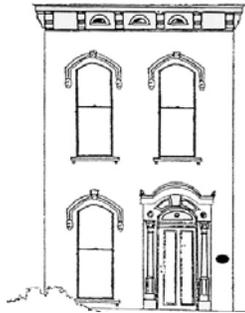


Figure A

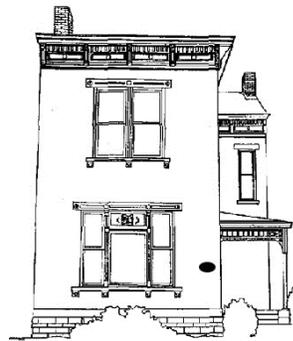


Figure B

PLAQUE INSTALLATION INSTRUCTIONS - MASONRY

1. Install screws on the back of the plaque
2. Cut off screw heads
3. Make a template for hole positions. Using a masonry drill bit, drill the correct number of holes for the installation. Try if possible to make holes in mortar. If the mortar crumbles drill into stone or brick.
4. Dry fit the plaque to verify its level.
5. Use two-part epoxy, 30 minute set. It is available at hardware stores, Kmart, Wal-Mart, Auto Part Stores. It looks like two hypodermic syringes.
6. Put epoxy on screws and in the pre-drilled holes.
7. Install plaque on wall.

PLAQUE INSTALLATION INSTRUCTIONS - FRAME

1. Place plaque on building and mark holes with pencil. Drill holes.
2. Screw the plaque into the pre-drilled holes.